


Invisible Access Panel for Tiles

MANUAL



1. Product Purpose

Invisible access panel for tiles is designed for **indoor installation** in vertical walls and partition walls, then finished with tiles or other cladding materials. The access panel allows access to concealed plumbing and engineering connections for maintenance and repair.

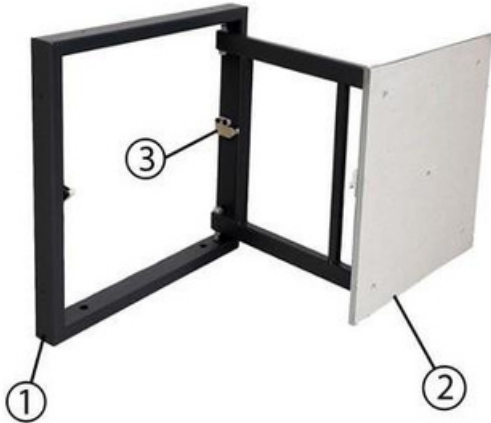


2. Product Components

1. Frame
2. Door
3. Lock

3. Product Installation – BASIC PRINCIPLES

1. Prepare an opening corresponding to the size of the access panel.
2. Place the access panel into the opening. Screw in all holes around the frame perimeter (Fig.1).
3. Tiles glued to the panel should overhang beyond the panel dimensions by 5–50 mm on the side opposite the hinge and by 5 mm on the other sides but no more than 50% of the tiles surface. They must not touch the floor, ceiling, or adjacent walls. The distance from the tiles to the nearest surface must be at least 25 mm.
4. At least 50% of the tiles surface must adhere to the panel.
5. Ensure adhesive does not enter the gap between the panel and the frame.

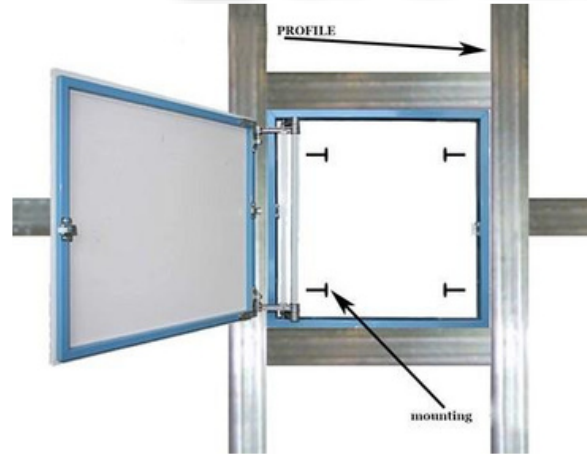

4. Product Use

The access panel is held closed by a spring-loaded roller latch and lock. Open the panel only from the hinge side:

1. Press the center of the panel on the hinge side.
2. Push approx. 1 mm until the latch clicks, then release.
3. The panel will pop open slightly.



5. Warranty The complete access panel has a warranty of 2 years on the welded structure and 1 year on fittings, counted from the purchase date.

Warranty is void if:

- the product is used for other purposes;
- installation and adjustment requirements are not met.